

INSTALLATION INSTRUCTIONS

APPLICATIONS Mazda RX-8 04-08

CT24MZ11 CT24MZ12


KIT FEATURES

- DIN Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket



KIT COMPONENTS

- A) Radio / Climate Control Housing
- B) ISO Brackets
- C) ISO Trim Plate
- D) Interface
- E) Wiring Harnesses

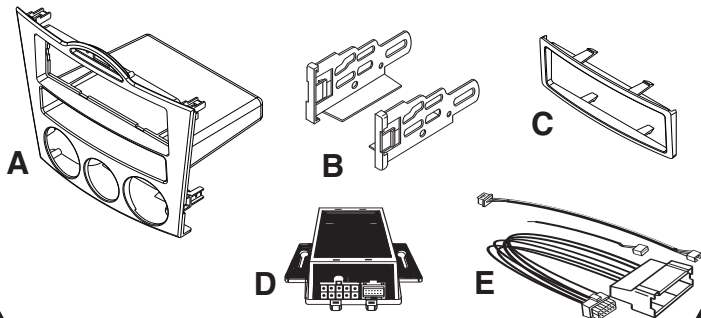

TOOLS REQUIRED:

- Small Flat Blade Screwdriver/ Panel Removal Tool
- Phillips Screwdriver
- Socket Set
- Cutting Tool

 


TABLE OF CONTENTS

Dash Disassembly

- Mazda RX-8 2004-20081,2,3

Kit Preparation4

Kit Assembly

- DIN Radio Provision with Pocket5


- ISO Mount Radio Provision with Pocket5

Final Assembly6,7,8

Display Customization9

***Note:**

Refer also to the instructions included with the aftermarket radio.

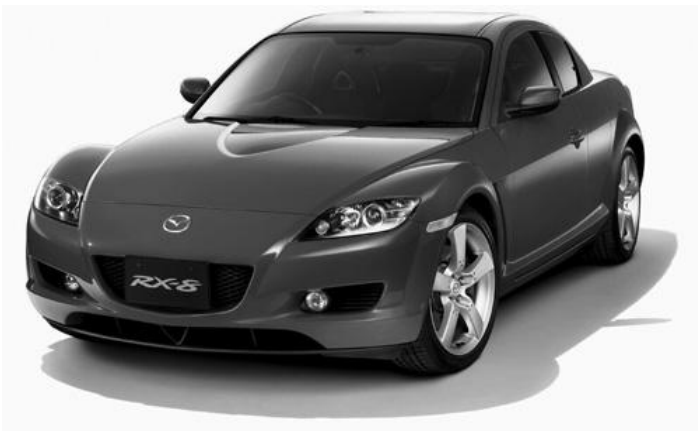


MAZDA RX-8 2004-2008


- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unscrew the shift knob counter clockwise to remove. (Figure A)
- 3 Unclip and remove the shifter trim panel. (Figure B)
- 4 Remove (2) Phillips screws from the bottom of the ashtray assembly then unclip and remove the assembly. (Figure C)
- 5 Unclip and remove the knee panel on the driver's side under the steering column (Figure D) then remove (1) 10 MM bolt from the side of the radio bracket. (Figure E)

Continued on page 2.


A

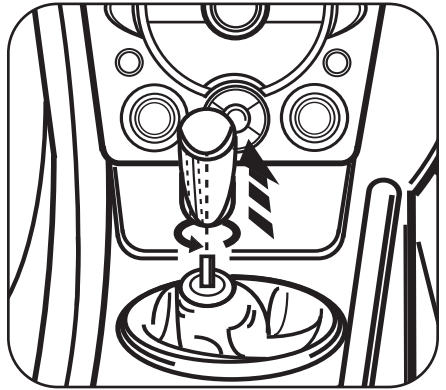


B

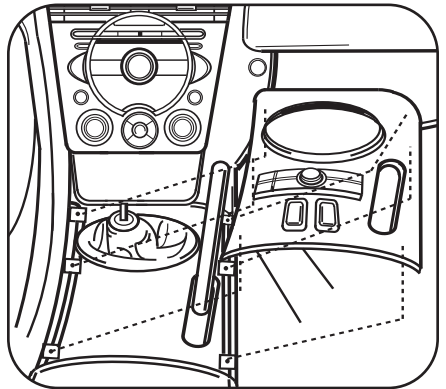

D

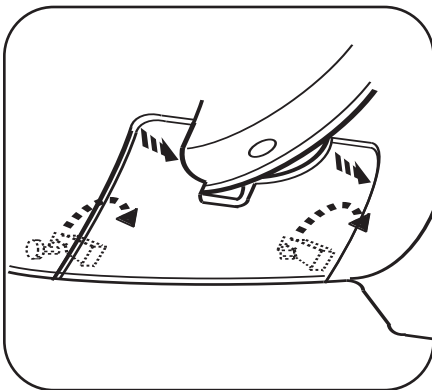

C

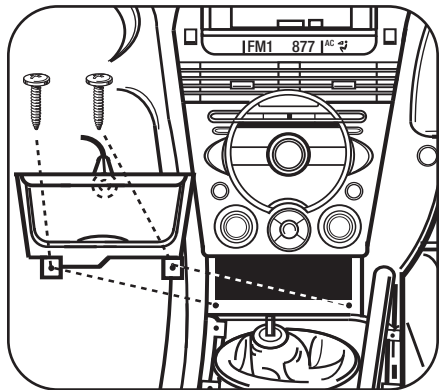


MAZDA RX-8 2004-2008


- 6 Remove (2) Phillips screws from the bottom of the radio/climate control panel. (Figure F)
- 7 Unsnap radio/climate control panel including radio chassis. Unplug and remove panel and chassis. (Figure G)
- 8 Remove (3) Phillips screws securing the factory display harness to the radio chassis. Unplug and remove display harness. (Retain display harness for re-use during kit assembly.) (Figure H)
- 9 Remove (4) screws securing the radio chassis to the radio/climate control panel. (Figure I)
- 10 Remove (6) screws securing the climate controls from the radio/climate control panel. Unplug and remove the climate controls. (Retain the screws and climate controls for re-use during kit assembly.) (Figure J)

Continued on page 3.


E

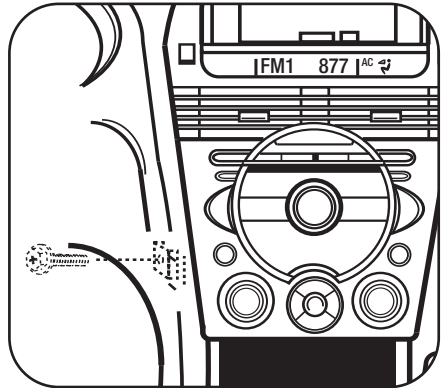


F

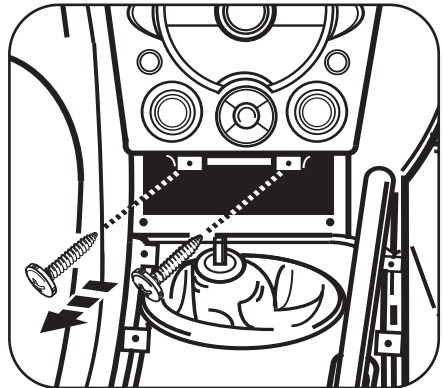

G

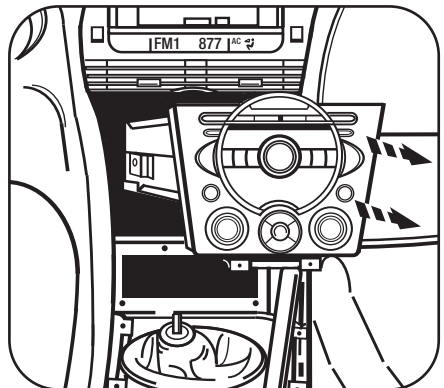

H

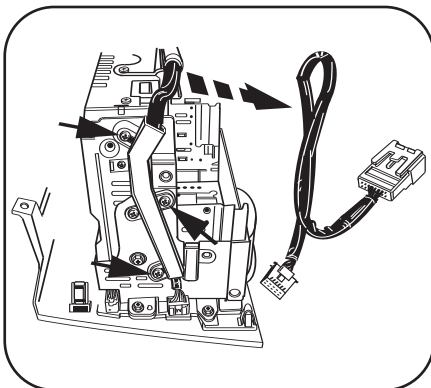

MAZDA RX-8 2004-2008


11 Remove (17) screws securing the circuit board to the radio/climate control panel to access the plug for the hazard switch assembly. (Figure K)

12 Remove (2) screws securing the hazard switch to the radio/climate control panel. Unplug and remove hazard switch. (Retain the screws and hazard switch for re-use during kit assembly.) (Figure L)


13 Trim the sub dash to allow clearance for the 99-7510 interface. (Figure M)

Continue to kit assembly.


M

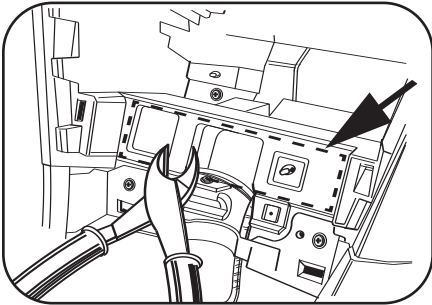


L

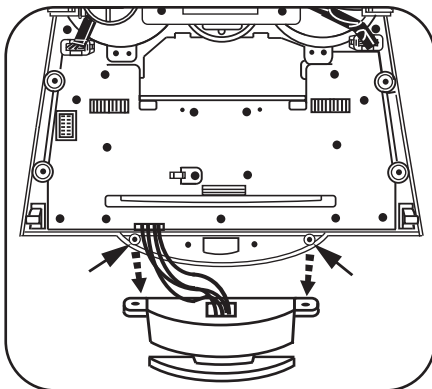


I

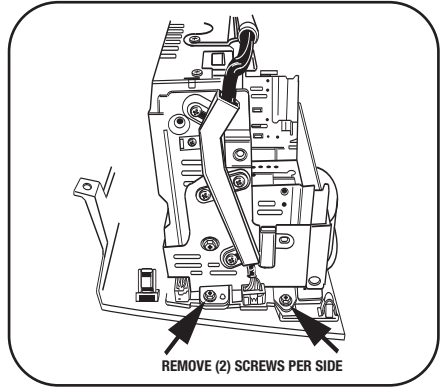

J

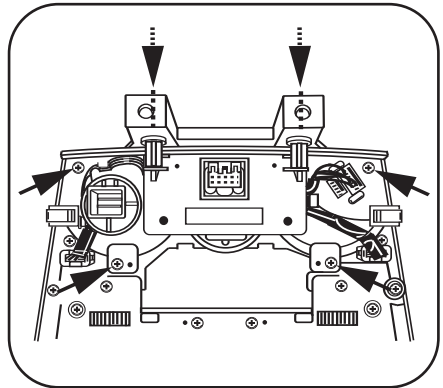

K

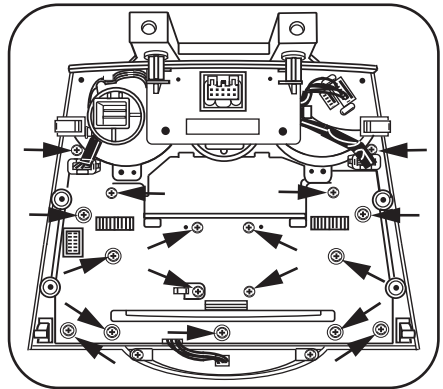



KIT PREPARATION

MAZDA RX-8 2004-2008

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Cut the top (2) mounting locations off of the climate controls to provide clearance for the aftermarket radio. (Figure A)
- 2 Secure the climate control to the radio/climate control housing using (4) of the factory screws removed in step (10) of the dash disassembly. (Figure B)
- 3 Secure the hazard switch assembly to the radio/climate control housing using the factory screws removed in step (12). (Figure B)

Continue to final assembly.

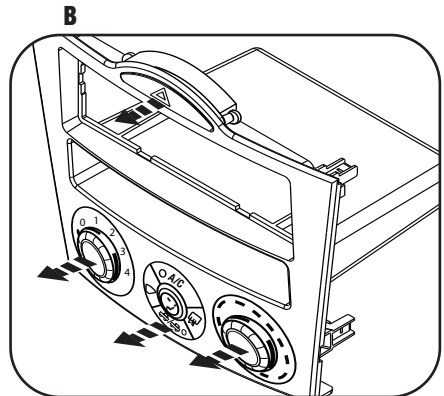
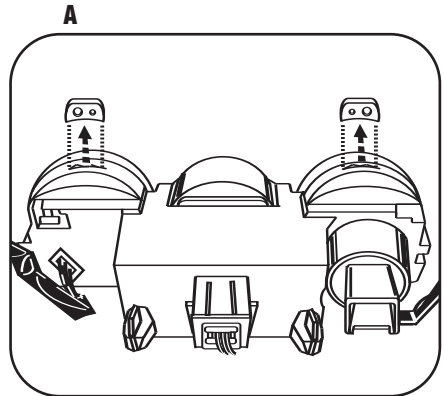


DIN RADIO PROVISION WITH POCKET

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Slide the DIN cage into the Radio/Climate Control Housing and secure by bending the metal locking tabs outward. (Figure A)
- 2 Slide the aftermarket radio into the cage until it snaps into place. (Figure B)



Continue to final assembly.

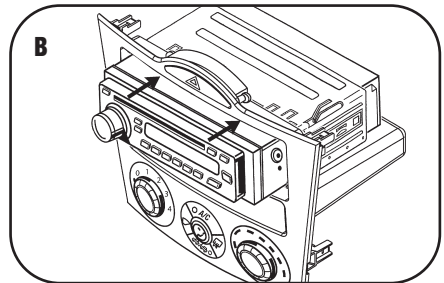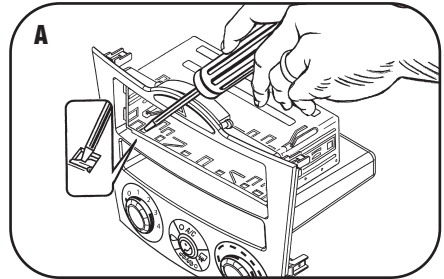


ISO MOUNT RADIO PROVISION WITH POCKET

- 1 Mount the ISO Brackets to the radio using the screws supplied with the radio. (Figure A)
- 2 Slide the radio into the Radio/Climate Control Housing until it snaps into place. (Figure B)
- 3 Snap the Trim plate into the Radio Housing. (Figure B)

Continue to final assembly.

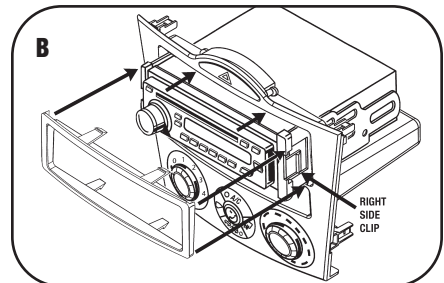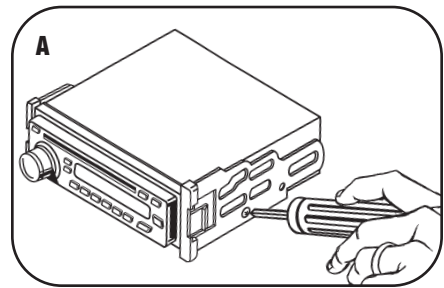

FINAL ASSEMBLY

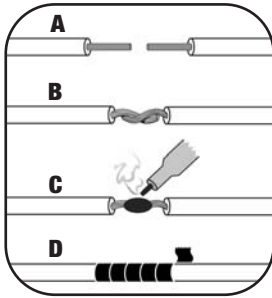

(A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

- 1 Locate the factory wiring harness in the dash. Use the supplied wire harnesses and make the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit). Refer to Wiring Code below.

FINAL WIRING CONNECTIONS

Make wiring connections using the color code chart shown below and the instructions included with the head unit. We recommend making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

WIRING CODE

12V Ignition / Acc. Red

12V Batt / Memory Yellow

Ground Black*

Power Antenna Blue

Amp Turn-On Blue / White

Amp Ground Black / White

Illumination Orange

Dimmer Orange / White

Right Front (+) Gray

Right Front (-) Gray/ Black

Left Front (+) White

Left Front (-) White / Black

Right Rear (+) Violet

Right Rear (-) Violet / Black

Left Rear (+) Green

Left Rear (-) Green / Black

**NOTE: When a Black wire is not present, ground radio to vehicle chassis.*

All colors may not be present on all leads due to manufacturer's specifications.

Continued on Page 7


FINAL ASSEMBLY

Continued from Page 6

WARNING!

FAILURE TO INSERT THE HVAC CABLES INTO THE CORRECT LOCATION WILL CAUSE DAMAGE TO THE INTERFACE AND MAKE THE DISPLAY AND HVAC CONTROLS NOT FUNCTION PROPERLY


- 2 Plug the Temperature Control cable from the factory climate control into the port on the interface that reads "TEMP".
- 3 Plug the Fan Control cable from the factory climate control into the port on the interface that reads "FAN".
- 4 Plug the Display cable removed in step 8 of the dash disassembly into the port on the interface that reads "DISP".
- 5 Plug the Hazard Switch extension cable into the end of the hazard switch and the other end of the extension cable into the port next to the "DISP" port.

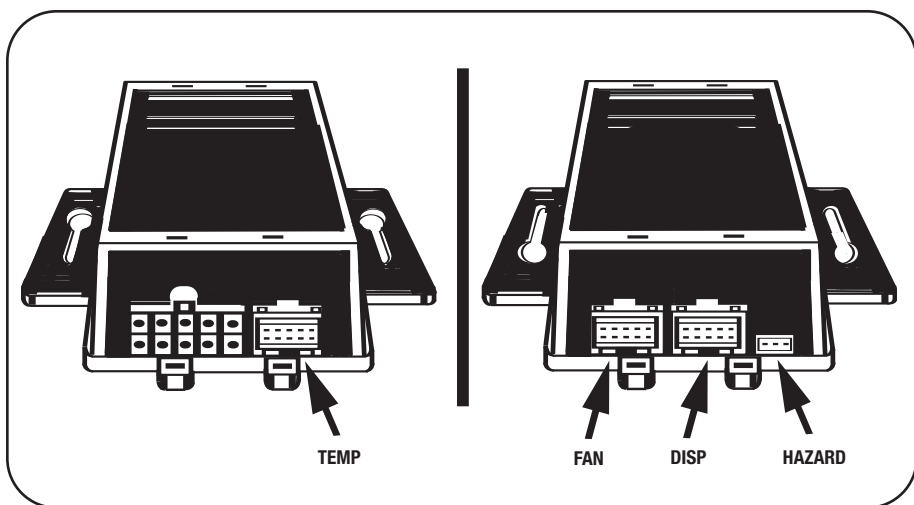

Continued on Page 8

FINAL ASSEMBLY

Continued from Page 7

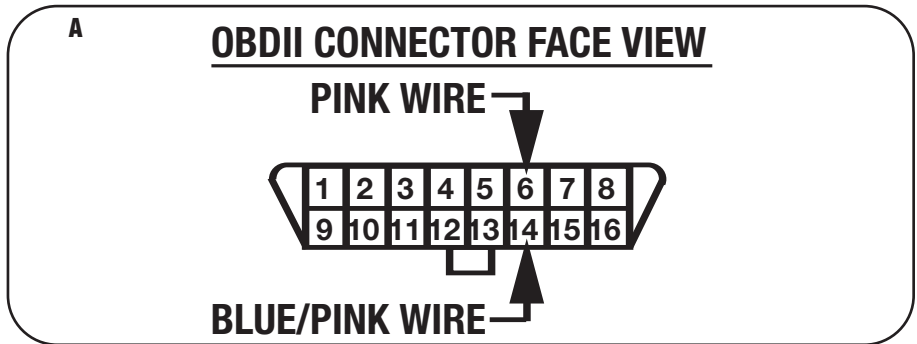



- 6** When using the Nav features of the interface you will need to connect the 2 pin harness and run the 2 wires to the OBDII connector and connect them in the position shown. (Figure A)
- 7** The following wires on the 10 pin harness are for the aftermarket radios that have navigation built in:
 - A.** Connect the **green** wire to the parking brake wire of the aftermarket navigation radio.
 - B.** Connect the **blue/pink** wire to the VSS or speed sense wire of the aftermarket navigation radio.
 - C.** Connect the **green/purple** wire to the reverse wire of the aftermarket navigation radio.

NOTE: *Reverse output is NOT present on manual transmission vehicles.*
- 8** Re-connect the negative battery terminal and test the unit for proper operation.
- 9** Reassemble radio and dash assemblies in reverse order of disassembly.

DISPLAY OPTIMIZATION

DISPLAY CUSTOMIZATION

**Note: Refer also to the instructions included with the aftermarket radio.*

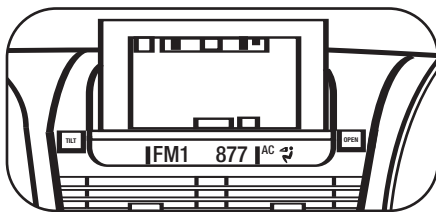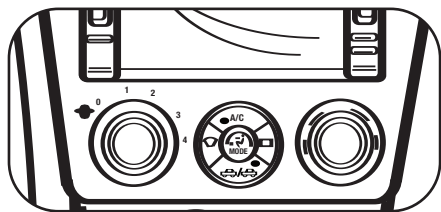

- 1 Press and hold the **A/C Mode button** to scroll through the various kit options (AMB TEMP ON or OFF, AMB TEMP C or F, SET TIME 12/24H, and SET TEXT).
- 2 When you see the option you want just let the button go and the action on the screen will be performed. (ie: To turn the ambient temperature on you would scroll through until the display says "AMB TEMP ON" and let the button go.)
- 3 To set the time hold down the **A/C Mode button** until the display says "SET TIME 12/24H" then let the button go.
- 4 To switch between 12H and 24H press the **front defrost button** to the left of the **A/C Mode button**.
- 5 To change the Hour press the **rear defrost button** to the right of the **A/C Mode button**.
- 6 To change the minute press the **A/C button** at the top of the **A/C Mode button**.
- 7 At any time if you do not press any buttons for 5 seconds the display will save and return to the default screen and the **climate control buttons** will return to their normal configuration.
- 8 If you hold the **A/C Mode button** down long enough the display will say "SET TEXT". This will allow you customize the default text on the display.
- 9 Once the display says "SET TEXT" let go and the first letter of the display will begin blinking.
- 10 Press the **front defrost button** to move the cursor left and the **rear defrost button** to move the cursor to the right.
- 11 You can scroll up with the **A/C button** and down with the **Recirc/Fresh button** through the various alpha, numeric, and symbol characters.
- 12 When you are finished entering your text if you do not press any buttons for 5 seconds the display will save and return to the default screen and the **climate control buttons** will return to their normal configuration.

INSTRUCTIONS

