




# Installation Manual

Part No.: CT23VW01A  
Black

- VW Amarok 2010 >
- VW Beetle 2011 >
- VW Caddy 2004 >
- VW EOS 2006 >
- VW Golf/Golf Plus/Cabrio 2003 >
- VW Jetta 2005 >
- VW Passat/Passat CC 2005 >

- VW Polo 2009 >
- VW Scirocco 2008 >
- VW Sharan 2010 >
- VW Tiguan 2007 >
- VW Touran 2003 >
- VW Transporter 2009 >
- VW Vento 2010 >

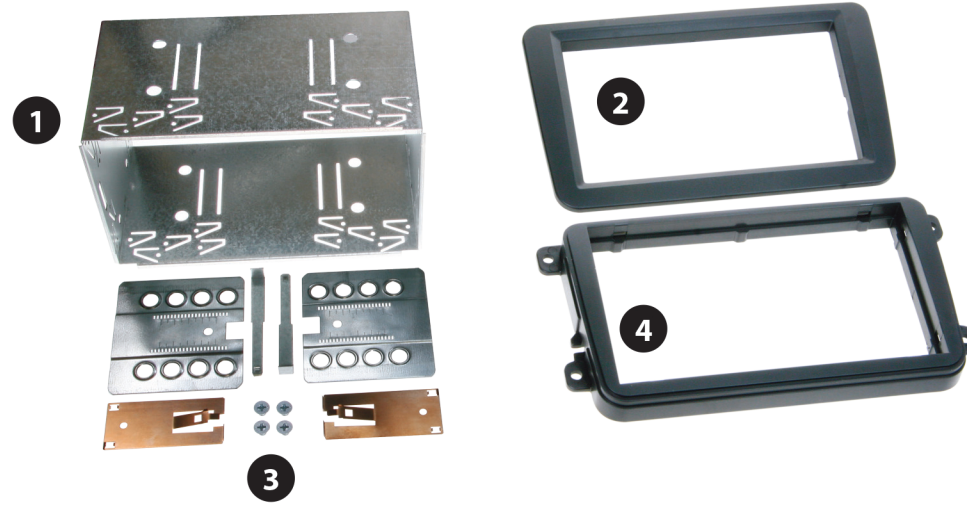

- (1) Metal Frame
- (2) Radioblende
- (3) Installation Kit
- (4) Mounting Frame



### VW Golf V only:

Pull up the aircone unit (fixed by clips). Remove two Torx (TX20) screws (see arrows) which become visible.




1. Remove the original trim frame, surrounding the radio (fixed by clips).




2. Remove the 4 Torx (TX20) screws (These screws will be used again later).

Remove the OEM head unit.

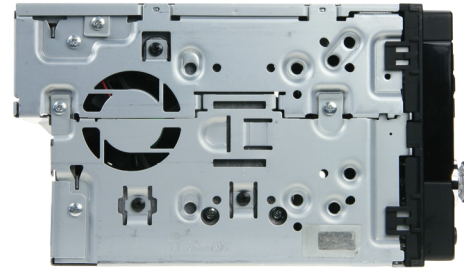


(sample photo)

Mount the metal brackets with double DIN head unit

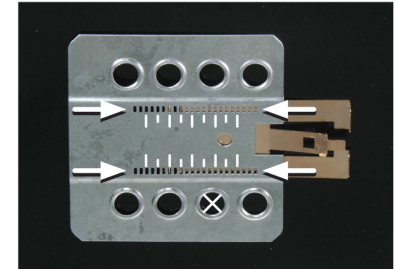

(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)

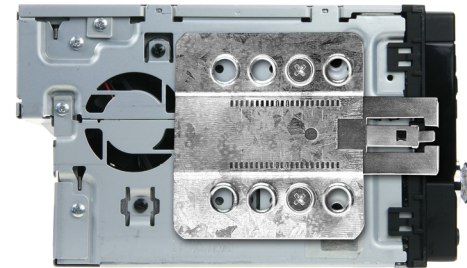

(sample photo)

3. Connect all required circuit points and push the double DIN head unit until it snaps in.

Fix mounting frame with 4 original-Torx (TX20) screws, place fascia plate



(sample photo)

4. Install everything in reverse Order to finish installation